



VoxBooks™
Books that Talk!

How to use

Me pehea te whakamahi

The VOX™ Reader is permanently attached to the inside of every VOX Book.

Ko te VOX™ Reader he pumau tonu ka piri ki roto o ia Pukapuka VOX.

SPEAKER

TUKUORO

POWER

When the reader is on, the red and green lights will both be on.

HIKO
I te wā, kua timata te mihini pānui, ka kite koe i te rama whero me te rama kakariki.

RED LIGHT

Will flash when battery is low.

RAMA WHEREO

Ka uira ina iti te pākahiko.

GREEN LIGHT

After a 5 second boot-up, the reader will play and the green light will flash.

RAMA KAKARIKI
Whai muri i te 5 tuarua o te whakaohoo, ka takaro te kaipanui, ka whiti te rama matomato.

PLAY/PAUSE

If the reader is paused, both the red and green lights will light up.

PUREI/KĀTI
Mehemea kua kāti te mihini pānui, ka marama i te rama whero me te rama kakariki.

VOLUME

KAHAORO

SKIP FORWARD/ BACKWARD

PEKE WHAKAMUA/ HOKI WHAKAMURI


EARPHONE PORT

WĀHANGA PURUTARINGA

CHARGING PORT

While charging, both lights will blink. When charging is complete, both lights will be solid.

WĀHANGA HIHIKO
I te wā hihiko, ka kemokemo ngā rama e rua. Ka mutu te hihiko, ka tū tonu ngā rama e rua.

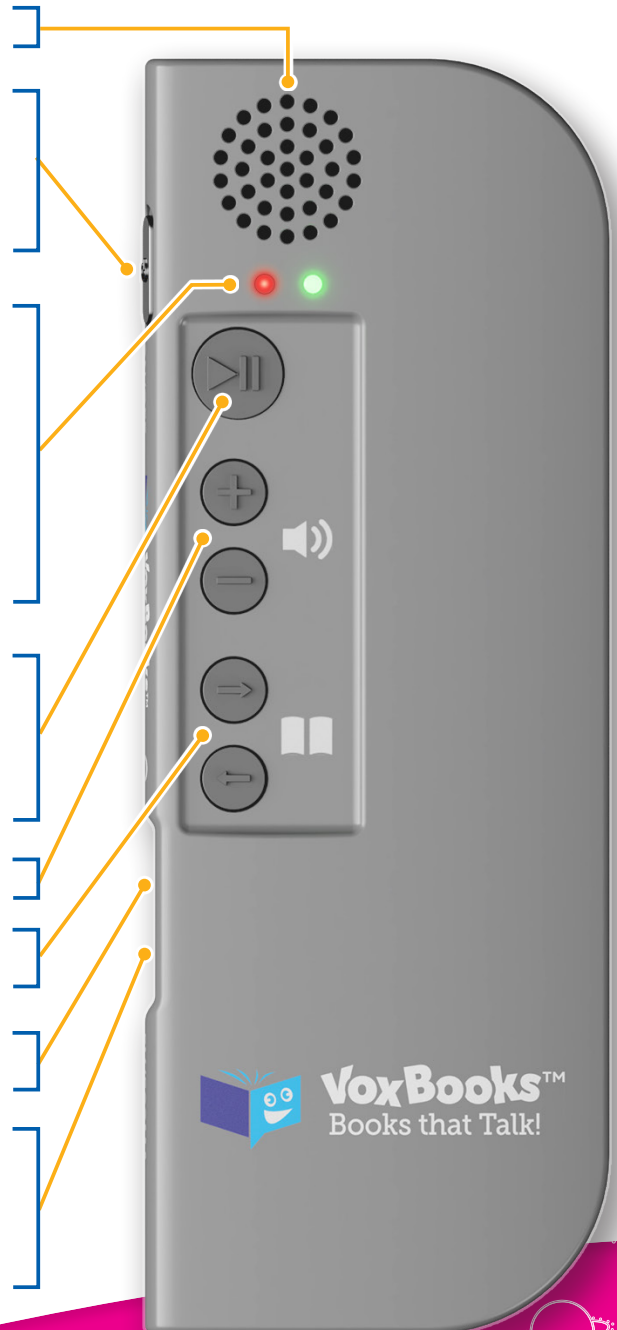

library ideas®